



CROSS LEVER

Secondary lever for drop handlebars

Compatible with all cable actuated brakes

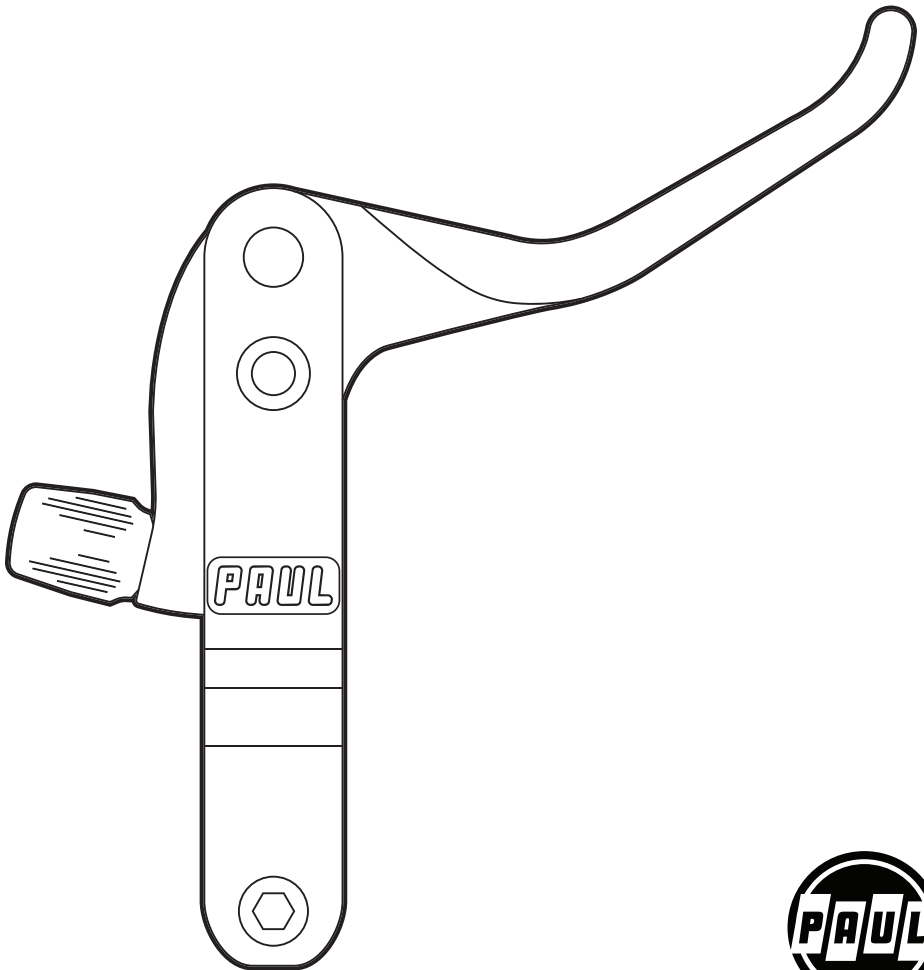

- 1. REMOVE BRAKE CABLE**
- 2. INSTALL CROSS LEVER ON HANDLEBAR BULGE(NEAR THE STEM CLAMP).**
- 3. WHEN CUTTING THE BRAKE HOUSING MEASURE CLOSER TO THE HANDLEBAR CLAMP RATHER THAN THE HANDLEBAR TAPE. CAREFULLY CUT THE BRAKE HOUSING WHERE IT WILL GO INTO THE CROSS LEVER FROM THE DROP BAR BRAKE. REMEMBER THAT IT IS EASIER TO TRIM SOME HOUSING THAN IT IS TO RETAPE YOUR HANDLEBARS.**
- 4. CHECK HOUSING FIT. THE HOUSING SHOULD FIT SNUGGLY INTO THE CROSS LEVER.**
- 5. PLACE HOUSING FROM BRAKE INTO BARREL ADJUSTER OF CROSS LEVER.**
- 6. INSTALL NEW BRAKE CABLE AND RUN THE CABLE THROUGH DROP BAR LEVER THEN CROSS LEVER. ADJUST YOUR BRAKES AS NEEDED.**
- 7. DOUBLE CHECK EVERYTHING. MAKE SURE YOUR BRAKE CABLES ARE TIGHT AND YOUR BRAKES ARE FUNCTIONING PROPERLY.**
- 8. RIDE!**

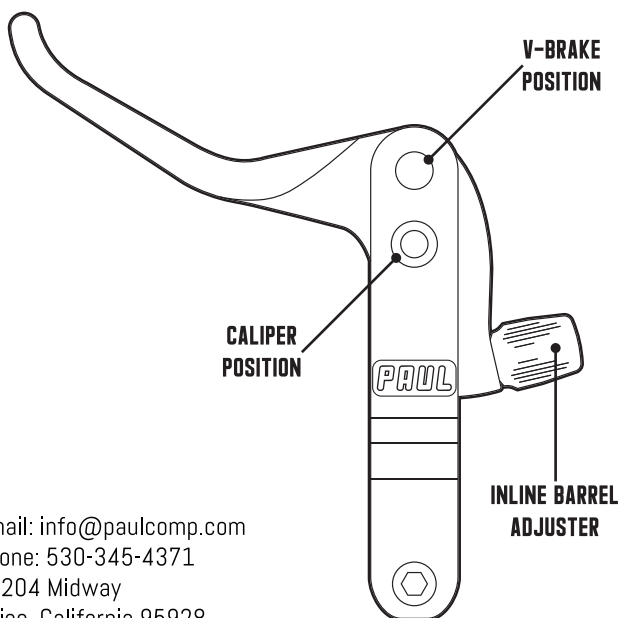

Email: info@paulcomp.com
Phone: 530-345-4371
11204 Midway
Chico, California 95928

