

# CROSS LEVER

secondary Lever for drop handlebars


compatible with any brakes

26.0 ○

31.8 ○

Left ○

Right ○

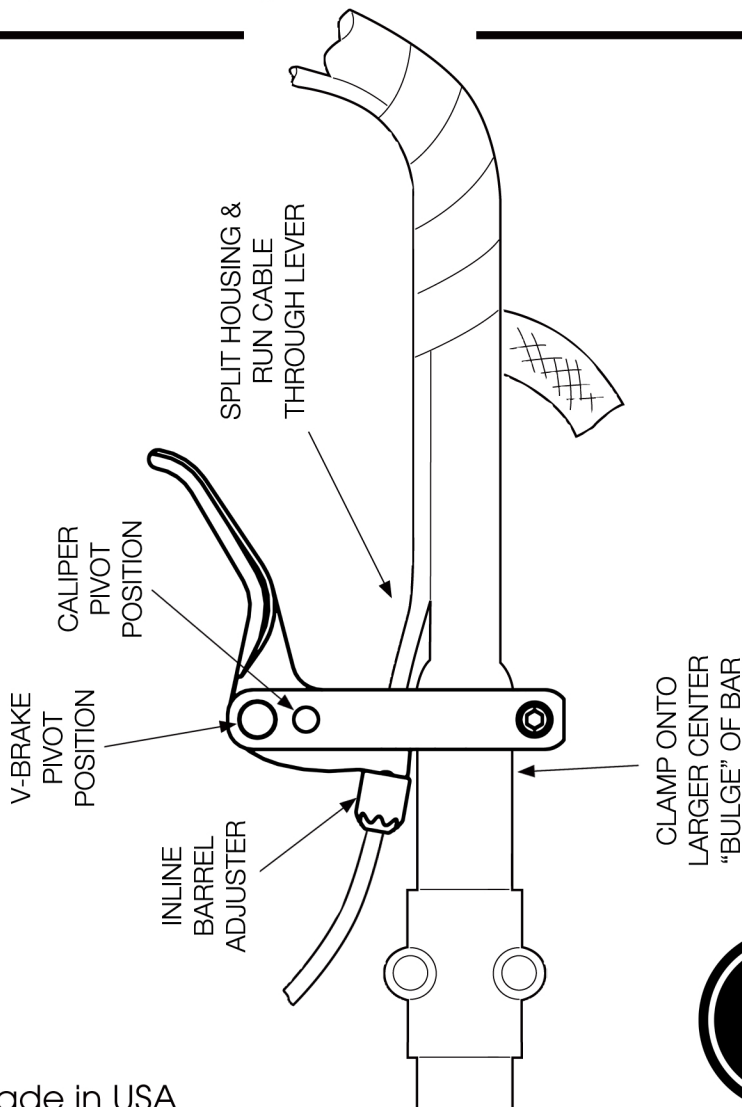

Nice parts since 1989

made in USA

# INSTALLING CROSS LEVERS

PLEASE READ CAREFULLY:

1. Remove brake cables.
2. Carefully cut brake housing where it will go into lever. Error closer to the handlebar clamp rather than the tape. Remember it's easier to trim some housing than to retape your bars.
3. Place brake lever on handlebar bulge (the bulge is the fat part where the stem clamps). Check your housing fit. The housing should end snugly in the lever.
4. Place housing from brake into other side of lever.
5. Install new brake cables running the cable through both levers and adjust brakes.
6. Double check everything. Make sure your brake cables are tight and your brakes are functioning properly.
7. Ride.



---

**PAUL Component Engineering**  
**[www.paulcomp.com](http://www.paulcomp.com)**