


FUNKY MONKEY FRONT

- * Front cable hanger for centerpull & cantilever brakes
- * Clamps onto threadless steerer tubes
- * Integrated barrel adjuster

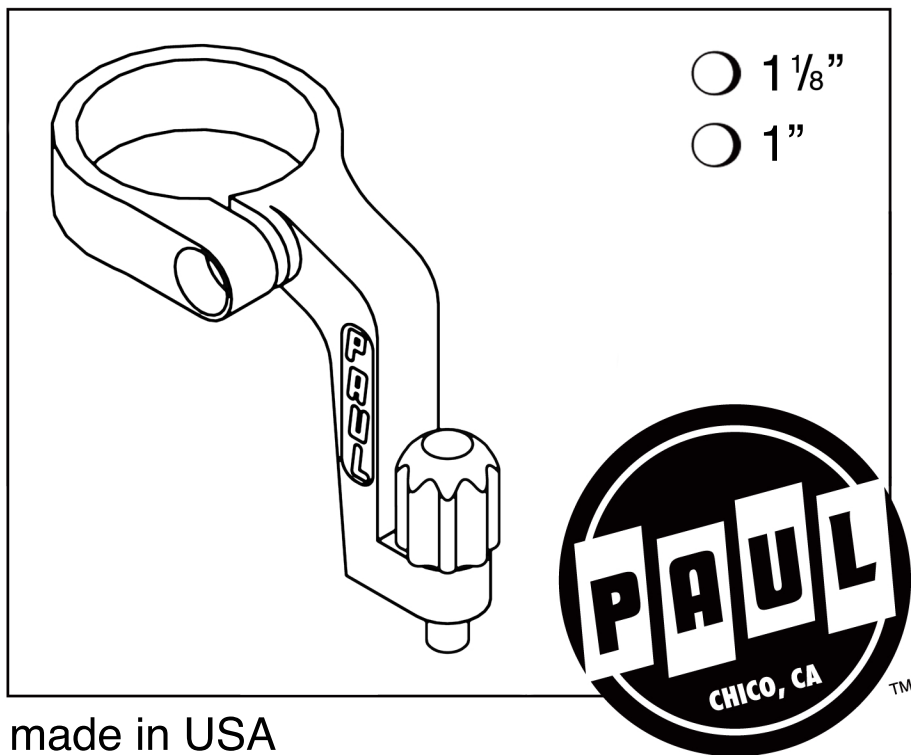

The **Funky Monkey Front** is designed to integrate with threadless headsets.


Before installation, loosen the M5x10 clamp screw.

Install the **Funky Monkey** onto the steerer tube as you would a headset spacer. It should sit just above the headset, below any other spacers and the stem.

Attach the stem and top cap of the headset, and adjust the headset bearing pre-load according to the manufacturer's specifications. Then tighten the stem clamp screws, centering the stem over the wheel.

Once the headset and stem are properly adjusted, the **Funky Monkey** can be centered under the stem and the clamp screw can be tightened.

The brake cable can be routed either above or below the stem. Avoid sharp bends in the cable housing that can increase cable friction.

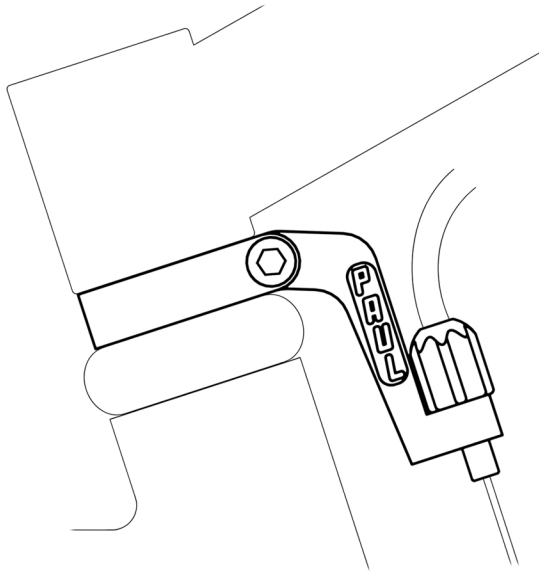

Paul Component Engineering
www.paulcomp.com