



Email: info@paulcomp.com


Phone: 530-345-4371

11204 Midway

Chico, California 95928



THUMBIES

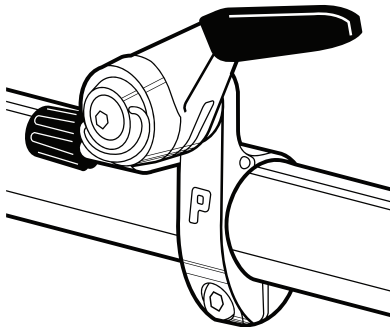

1. Mount Thumbie on the bar in the approximate position you want it.
2. Remove the bar-end shifter from its bar-end bracket or packaging. Save the mounting screw.
3. Mount shifter on Thumbie and install using the screw that came with the shifter. For Shimano Thumbies, replace the mounting screw with the one we supply.
4. Some Shimano shifters use two different thickness of spacers. Thinner spacer goes on left side, thicker on the right.
5. Rotate the shifter through its entire range to make sure it's aligned correctly.
6. Install cables and housing and make sure shifters are in position Tighten all screws and go for a test ride.